


PARKING BRAKE ALARM INSTALLATION INSTRUCTIONS

Passenger Cars

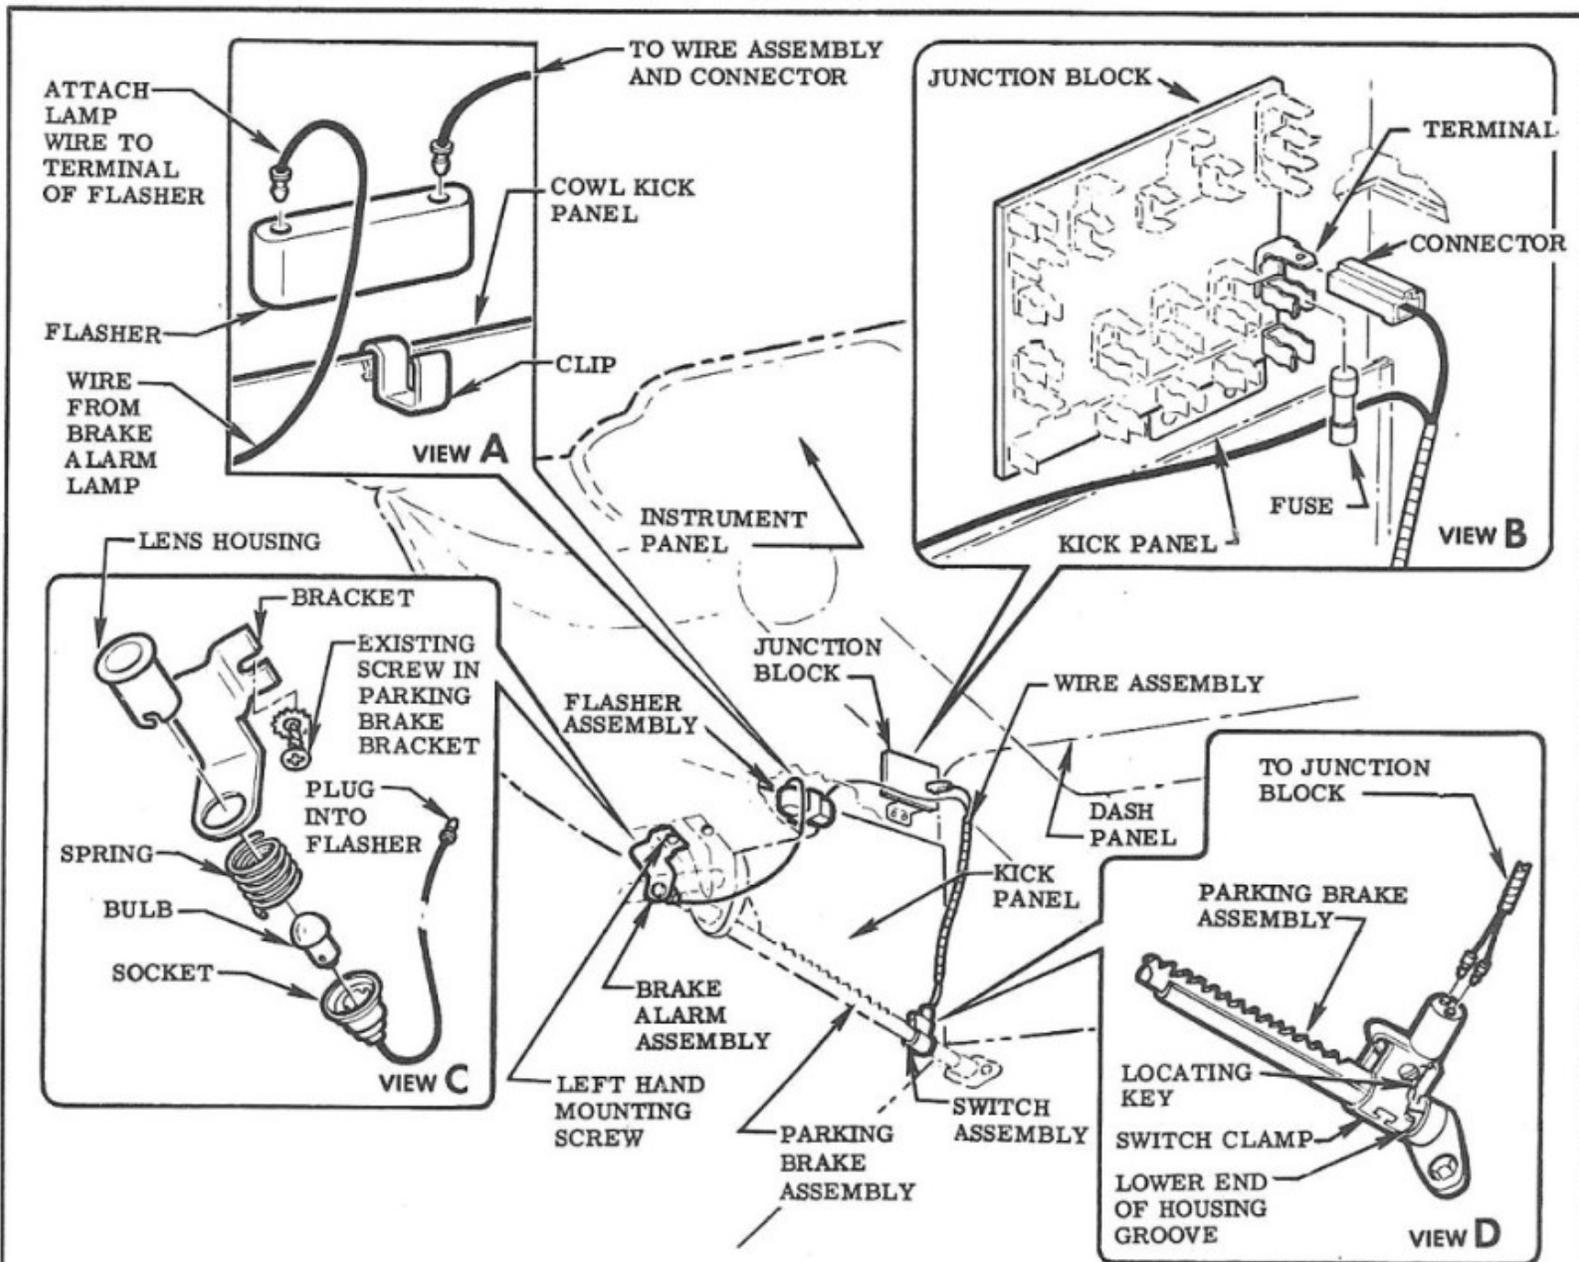

STEP 1 LOOSEN THE LEFT HAND PARKING BRAKE BRACKET MOUNTING SCREW AND SLIDE THE LAMP BRACKET SLOTTED FLANGE BETWEEN THE PARKING BRAKE BRACKET AND THE LOCKWASHER. POSITION AS SHOWN IN MAIN VIEW AND TIGHTEN SECURELY.

STEP 2 ASSEMBLY THE LAMP ASSEMBLY THROUGH THE BRACKET HOLE AS SHOWN IN VIEW C.

STEP 3 INSTALL THE FLASHER CLIP AND FLASHER ON THE COWL KICK PANEL AS SHOWN IN THE MAIN VIEW AND VIEW A.

STEP 4 ATTACH THE LAMP WIRE TO THE FLASHER AS SHOWN. (VIEW A.)

STEP 5 APPLY THE PARKING BRAKE AND ATTACH THE SWITCH CLAMP ON THE HOUSING AS SHOWN. (VIEW D.) WITH THE LOCATING KEY AGAINST THE LOWER END OF THE HOUSING GROOVE, TIGHTEN SECURELY.

STEP 6 INSTALL THE WIRE ASSEMBLY CONNECTOR AS SHOWN IN VIEW B. PLUG THE OPPOSITE ENDS OF WIRE ASSEMBLY INTO THE SWITCH ASSEMBLY (VIEW D).

STEP 7 PLUG REMAINING WIRE INTO FLASHER.

STEP 8 INSTALL FUSE IF NEEDED.